

OfficePro From: **SUTTLES LOGGING, INC.**



**HYDROCARBON WELL LOGGING
GEOLOGICAL CONSULTING**

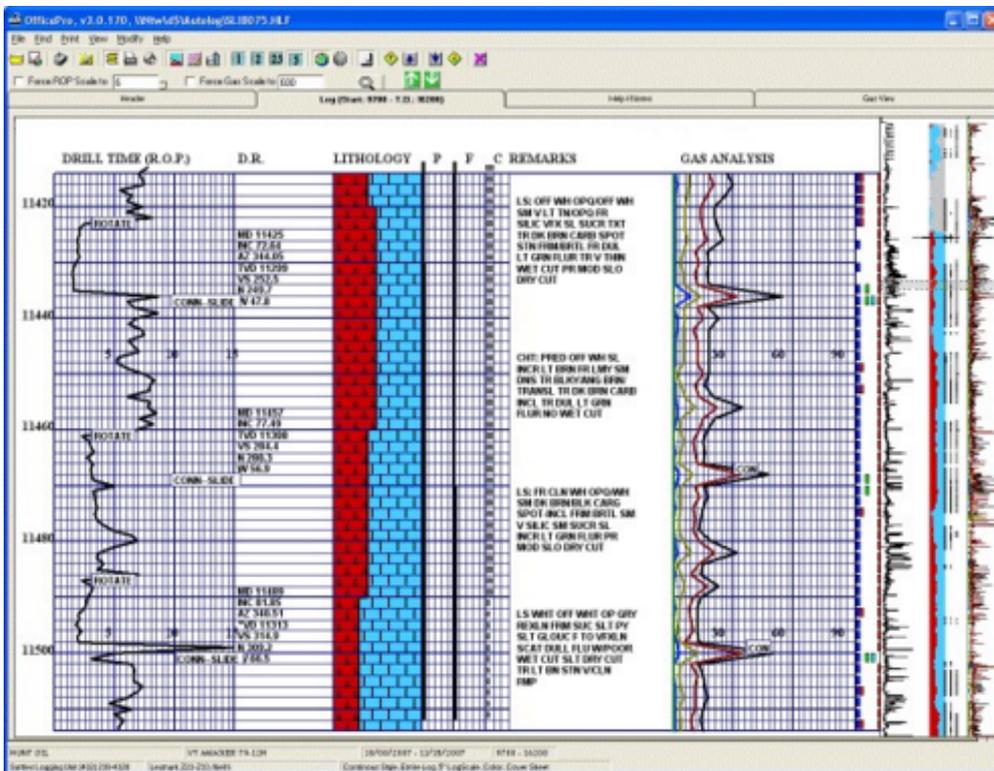


Table of Contents

Contents	4
How To	5
Change ROP or Gas Scales	6
Generate LAS Files	7
Navigate Through the Log	8
Print a Log	9
Install OfficePro	11
OfficePro Details	15
Menu Options	16
File	17
Find	18
Print	19
View	21
Modify	22
Tool Bar Icon Descriptions	24
Tabs	25
Header	26
Log	27
Gas View	29
Trouble Shooting	30
Lithology Doesn't Look Right	31
Log Doesn't Load When I Double Click On It	32
The Log Prints Lithology and Gas on Alternating Pages	33
The Printer Shows Way Too Many Pages	34
The Mud Log Will Not Print Correctly on My Plotter	35

Contents

WWW.SUTLOG.COM

- **How To**
 - [Change ROP or Gas Scales](#)
 - [Generate LAS Files](#)
 - [Navigate Through the Log](#)
 - [Print A Log](#)
 - [Install OfficePro](#)

- **OfficePro Details**
 - [Menu Options](#)
 - [File](#)
 - [Find](#)
 - [Print](#)
 - [View](#)
 - [Modify](#)

 - [Tool Bar Icon Descriptions](#)

 - [Tabs](#)
 - [Header](#)
 - [Log](#)
 - [Gas View](#)

- **Trouble Shooting**
 - [Lithology Doesn't Look Right](#)
 - [Log Doesn't Load When Double Clicked](#)
 - [Prints Lith on one Page and Gas on the next](#)
 - [The Printer Prints way too many pages](#)
 - [The Mud Log Will Not Print Correctly on My Plotter](#)

How To
[Change ROP or Gas Scales](#)

[Generate LAS Files](#)

[Navigate Through the Log](#)

[Print a Log](#)

[Install OfficePro](#)

[Back to "Contents"](#)

-0-

Change ROP or Gas Scales

(When the Force Scale option is selected, the modified log be displayed and printed with the scale entered. These changes are temporary. The log will revert to the original scale when the box is unchecked.)

- **Changing ROP scale** Force ROP Scale to

Temporarily change the ROP column to any scale. The new scale will be reflected throughout the entire log while the check box is checked. The value chosen will be the high end of the scale. There are 3 major divisions in the ROP column, so choose one that is easily divisible by 3... For example 3 or 6 or 9 (multiples or 1.5 work well also. 1.5 or 4.5 or 7.5 ect.)

- **Changing Gas scale** Force Gas Scale to

Temporarily change the Gas column to any scale. The new scale will be reflected throughout the entire log while the check box is checked. The value chosen will be the high end of the scale. There are 3 major divisions in the Gas column, so choose one that is easily divisible by 30... For example 30 or 60 or 90 (multiples or 15 work well also. 15 or 45 or 75 ect.)

[Back to "How To"](#)
[Back to "Contents"](#)


Generate LAS Files

LAS (Log ASCII Standard)

- OfficePro generates version 2.0 Las files.
- This file is compatible with any LAS import utility that is version 2.0 or later.
- Data is output in 1' increments and includes ROP, Total Gas, %C1, %C2, %C3, %C4, %C5, Porosity, Florescence, and Cut.

Generating an LAS File

- Click on File in the top left corner of OfficePro
- Click on Generate LAS (or one of its variants)
- An LAS file with the same name as the log will be generated in the same folder as the log file.
(ie... If the log is named SLI1234.HLF, the LAS will be in the same folder and will be named SLI1234.LAS)

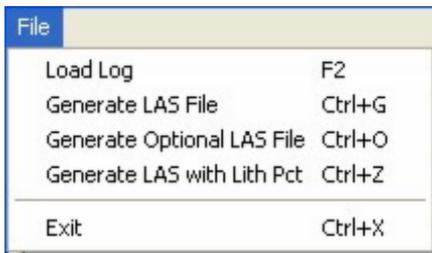

Explanation of LAS formats


- **Generate LAS File**
This option creates a standard LAS file. This file does not include lithology or descriptions. This is the option that is most compatible with a wide variety of programs.
- **Generate Optional LAS File** (Note: This file is not LAS compliant)
Creates a non standard LAS file that includes a 10 character string that represents the lithology and includes the description column.
- **Generate LAS with Lith Pct**
Creates a standard LAS file that includes lithology percentage. Each lithology symbol has a column with the percentage as the data.

[Back to "How To"](#)
[Back to "Contents"](#)

-0-

Navigate Through the Log

- The Preview Window on the right side of the log displays the entire log. Move the mouse to any point on the preview, and the depth will be displayed. Left click or drag the mouse on the preview to scroll through the log.

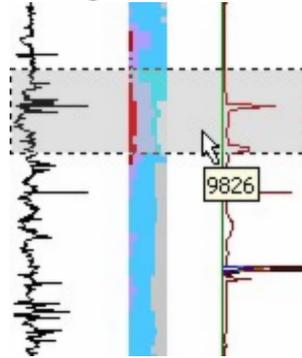

Note: The grayed area is 100' of log

- Use the scroll wheel on the mouse to scroll short distances through the log.
- The scroll wheel scrolls faster while pointing at the Gas, Lithology, or the ROP columns.
- Double click the log to bring up the Jump to What Depth window.
- Press and hold the right mouse button to magnify any point on the Log or the Preview window.
- Easily spot shows with the Preview Window by looking for gas kicks or Por/FI/Cut marks then click on the areas that are of interest.
- Arrow buttons at the top to the log:



[Back to "How To"](#)
[Back to "Contents"](#)

Print a Log

Due to the many variations in printer setup routines, this help file just deals with the general setup that will work for most printers. Refer to your printers user manual for specifics on adjusting these settings

Default

5 inch  Entire Log  Color  Single Sheets 

- Click the Print Log icon 

Custom

- Select Scale     . Default is  inch .
- Select Black and White  or Color  . Default is Color 
- Select Interval  or Full Log  . (Enter the interval after clicking Print Log )
Default is Full Log  .
-  Continuous (banner) or  Wide format Plotter or  Single Sheets
Default is Sheets  .
- Click the Print Log icon 

Tips on Printing Banner logs

Go to Printing Preferences for the printer in the printers folder:

(Close OfficePro before making any changes)

- Verify that the printer's paper type is set to Banner or Continuous
- Paper size is Letter 8.5 X 11
- Orientation is set to Portrait

Remember to click  Continuous (banner) on the toolbar before printing.

Tips on Printing Wide Scale Plotter logs

Go to Printing Preferences for the Plotter in the printers folder:

(Close OfficePro before making any changes)

- Application Page size: 8.5 X 80
- User Standards: Ansi (A,B,...); American; Units = English; (Do NOT select Oversize)
- Paper Source: 24" roll (regardless of the size paper you use.)
- Scaling: Fit To This Page: 12.5 X 107.2 inches
- Orientation: Portrait

Remember to click  Plotter style on the toolbar before printing.

If you are having problems printing a log, [CLICK HERE.](#)

[Back to "How To"](#)
[Back to "Contents"](#)

-0-

Install OfficePro


Note: if needed, print this page before continuing.

- Close any open applications before installing OfficePro.
- Click the following link to download the OfficePro setup program.
www.sutlog.com/officeprofull.msi

- When asked to Run or Save the installation file, choose Save
NOTE: Only choose Run on very fast internet connections.



- Find the Desktop or My Documents in the Save in drop down box.
Click Save

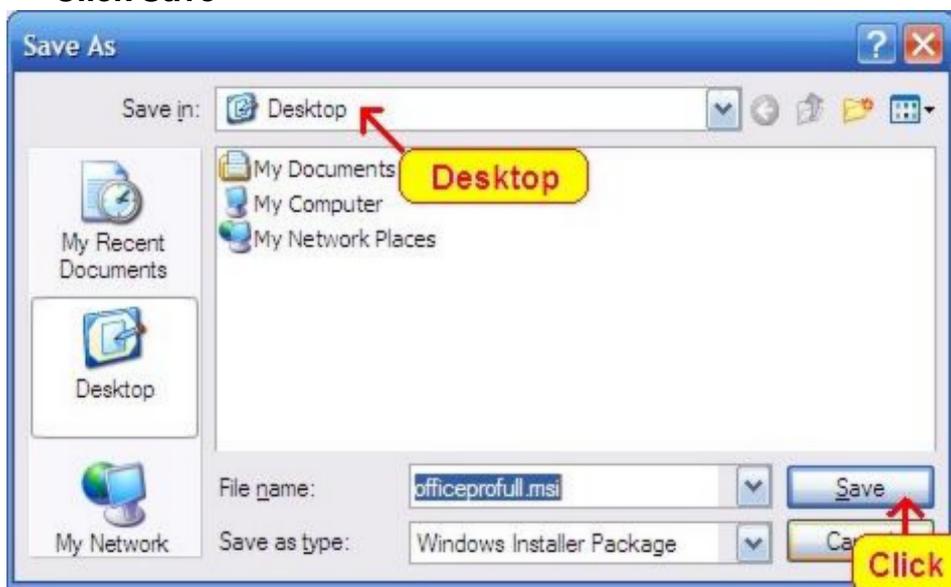

- When the download completes, click Run



- Windows will give a Security Warning about an Unknown Publisher.. Click Run



- A reminder about uninstalling previous version will appear.. Click Next



(This step will only appear if OfficePro was not uninstalled.)

- If a previous version was not removed you will be prompted to Repair or Remove Office Pro. Click remove.. Then click finish.



If you were required to follow these steps, the setup will exit. Double click on the OfficeProFull.msi that was saved earlier to

start the installation again.


- **Welcome to OfficePro Wizard .. Click next**



- **Installation Folder.**
(Using the default folder is recommended)
(The default is C:\Program Files\OfficePro\)
Click Next



- **Confirm Installation.. Click Next.**

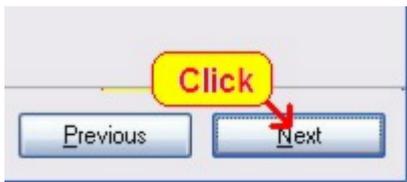

- **OfficePro will now install.**
If you receive errors, just click Continue or Ignore to continue the installation.
These errors occur when another program protects a file that OfficePro needs.
OfficePro will run problem free with any version of these shared files.



- **Click Close and your all done.**



- **NOTE: 64 Bit versions of Windows Vista might require a re-boot to complete the installation.**
- You can download a demo log by clicking on the following link. Click Save to save it to your desktop or Click open and

double click on the .hlf file to open the log with OfficePro without saving.


<http://www.sutlog.com/officepro/slidemo.zip>

If you need any help, feel free to call our Office **(432) 687-3148**
Ask for Jay Scarpa (CIS Manager) or Harlan Martin (IT Development).

[Back to "How To"](#)
[Back to "Contents"](#)

-0-

OfficePro Details

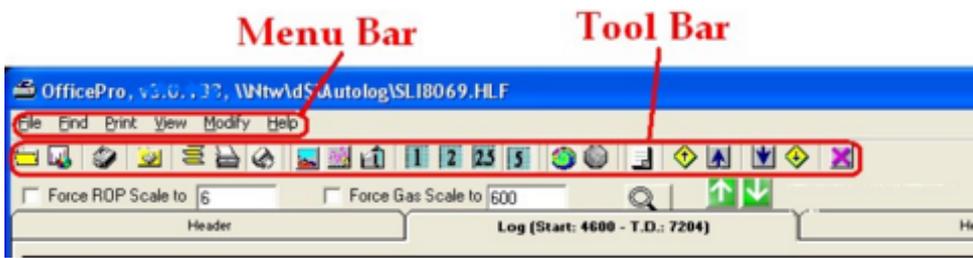

[Menu Options](#)


[Tool Bar Icon Descriptions](#)

[Tabs](#)

[Back to "How To"](#)
[Back to "Contents"](#)

-0-

Menu Options

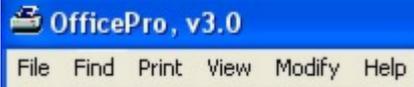

[File](#)

[Find](#)

[Print](#)


[View](#)

[Modify](#)

[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

-0-

File File Menu

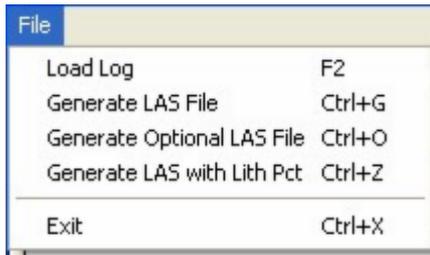

Generate LAS File

This option creates a standard LAS file. This file does not include lithology or descriptions.

Generate Optional LAS File **(This file is not LAS compliant)**

Creates a non standard LAS file that includes a 10 character string that represents the lithology and includes the description column

Generate LAS with Lith Pct

Creates a standard LAS file that includes lithology percentage. Each lithology symbol has a column with the percentage as the data.

[Back to "Menu Options"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)


-0-

Find




- **Find Text**

Search the entire log or search individual columns. Choose where to look and enter the search text.

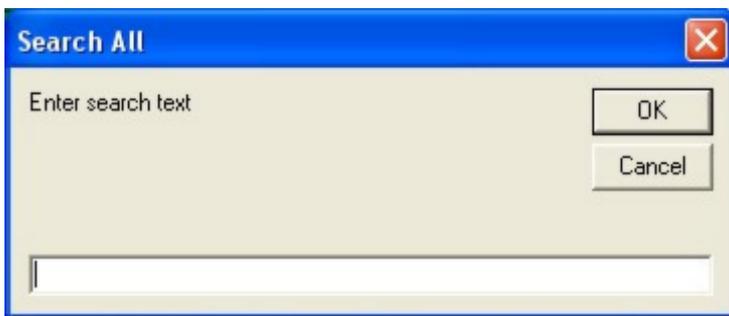

The search text will be marked in pink in the thumbnail view of the log. Click on the thumbnail to jump to that position in the log.

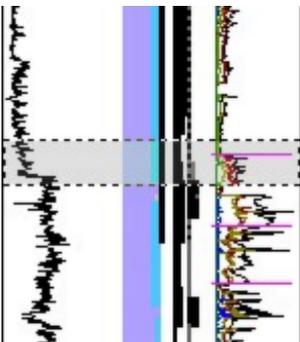


Click Find and Clear Search Results to remove the markers.

[Back to "Menu Options"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

Print

Note: Log printing will not start until Print on the Print menu or the Print Log icon  is clicked.

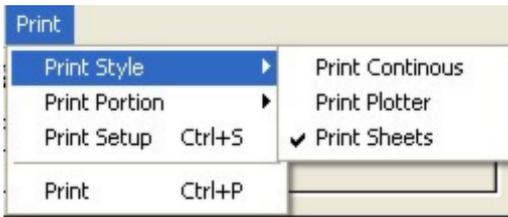

Print Continuous (Corresponds to)

Use this option to print one long continuous log.


Note.. The printer must support banner printing to use this option.

Print Plotter (Corresponds to)

This option is used for HP plotters. See [Printing a Log](#) for help using this option.

Print Sheets (Corresponds to)

This is the default print option. When selected, the log will print on multiple pages.

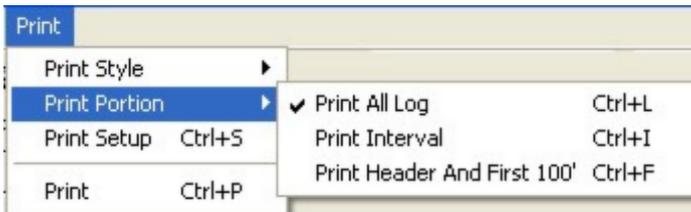

Print All Log (Corresponds to)

Prints the entire log.

Print Interval (Corresponds to)

Print a selected interval. (**Note: Interval will be entered after clicking the Print Log icon )**

Print Header and first 100' (Corresponds to)

Prints the header and first 100'

Print Setup (Corresponds to)

Choose the printer and change printer settings.

Know issues:

- **Some printers will not keep settings that are changed here. Exit OfficePro and adjust settings from the printers folder**
- **Printer will not update after this option is used once. Exit OfficePro and reopen the log to re-adjust settings**

Print (Corresponds to)


Starts the printing process.

[For Help Printing a Log, click here.](#)

[Back to "Menu Options"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

-0-

View View Menu

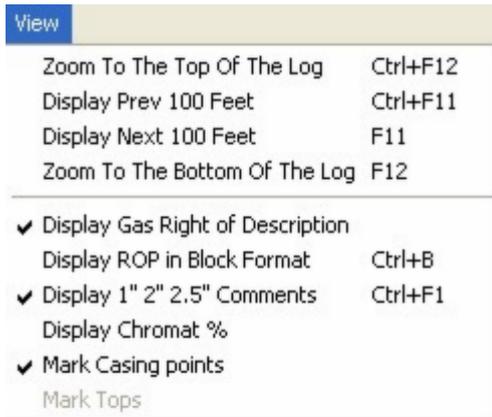

Most of these options are self explanatory, so I will only cover a few of them.

Display Gas Right of Description.


This option moves the Gas to the right of the Description column. Previous versions of Office Pro displayed the description column on the far right of the log.

Display 1" 2" 2.5" comments

By default, descriptions are not displayed if the log is not set to anything other than a 5" scale. If this option is selected, portions of the description will be displayed on any scale. (the entire description will not fit with scales less than 5")

Display Chromat%

This will display a small window in the description column that gives a percentage breakdown of the chromatograph.

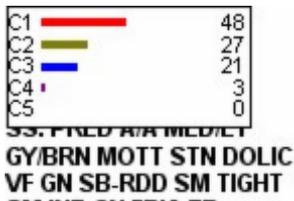

Mark Casing points


Searches the description column to identify and mark casing points on the log. This method of identifying casing points will allow the program to work with older Suttles logs.

Mark Tops

Not functional yet, but coming soon

[Back to "Menu Options"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)


Modify

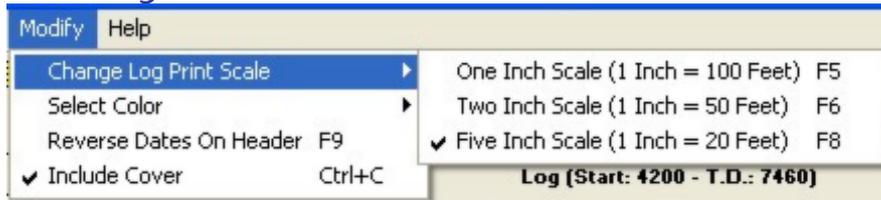

Change Log Print Scale (Corresponds to)


- Selects the size of log that will be printed.
 - 1 = 1" of paper = 100'
 - 2 = 2" of paper = 100'
 - etc...

The default setting will print a 5" log.

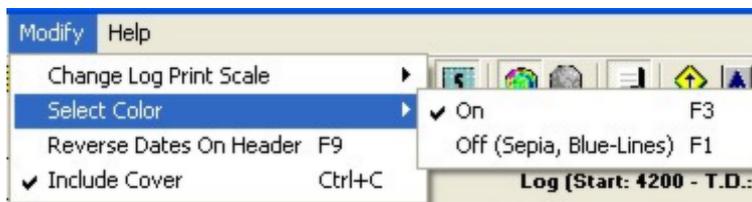


Select color (Corresponds to)

Turns the color on or off.

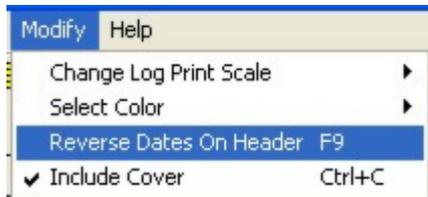

Reverse Dates On Header

Not Functional

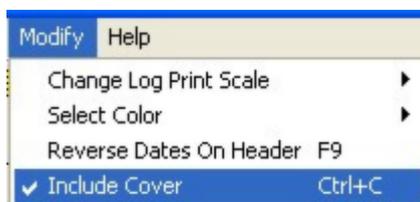

Include Cover (Corresponds to)

Include the header while printing log.

[Back to "Menu Options"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

Tool Bar Icon Descriptions



 = Load Log

 = Generate LAS file (Standard LAS)

 = [Print Log](#)

 = Select Printer

   = [Printing Style](#)

 = [Continuous Style](#) (For most banner printers)

 = Plotter Style (For HP Plotters)

 = Sheet Style (For single sheet printers)

  = Entire Log / Interval

 = Header and first 100'

    = Log Scale

  = Color On/Off

 = Include the header

[Back to "Menu Options"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

-0-

Tabs



Header

Displays the header information for the log

Log

Displays the Mud Log

Help/Notes

Displays general help for OfficePro.

If notes were included with the log, this page will display them. (Note files will have the same name as the log, but will be .txt documents)

Gas View

Displays just the gas curve in an easy to view format.

[Back to "Tool Bar Icons"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)




-0-

Header

OfficePro, Printed: 11-16-2007 API: 42-435-33270

8140-07-640

Log Scale: 5"

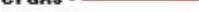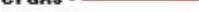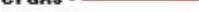
 <p>SUTTLES LOGGING, INC.</p> <p>HYDROCARBON WELL LOGGING GEOLOGICAL CONSULTING</p> <p>P.O. BOX 10725, Midland, TX 79702 (432)687-3148</p>	Producer: PRODUCER																				
	Wellname: Wellname																				
	Location: SECTION BLOCK																				
	Survey: FSL & FEL																				
	County, St: COUNTY, TX																				
Geologists: DAVE																					
Elevation: (GL)- 0 (KB)- 0																					
Depths: (START)- 4800 (TD)- 5300 , Dates: 11/10/2007 TO 11/12/2007																					
<table border="0"> <tr> <td>CO - Circulate Out</td> <td>LC - Lost Circulation</td> </tr> <tr> <td>CON - Connection Made</td> <td>NB - New Bit</td> </tr> <tr> <td>DC - Depth Correction</td> <td>NR - No Returns</td> </tr> <tr> <td>DDC - Drills Depth Correc.</td> <td>PG - Plugged Back</td> </tr> <tr> <td>DS - Directional Survey</td> <td>TD - Hot_Wireal Depth</td> </tr> <tr> <td>DST - Drill Stem Test</td> <td>WOB - Weight On Bit</td> </tr> </table>	CO - Circulate Out	LC - Lost Circulation	CON - Connection Made	NB - New Bit	DC - Depth Correction	NR - No Returns	DDC - Drills Depth Correc.	PG - Plugged Back	DS - Directional Survey	TD - Hot_Wireal Depth	DST - Drill Stem Test	WOB - Weight On Bit	<table border="0"> <tr> <td>ANYHYDRITE - </td> <td>LIMESTONE - </td> </tr> <tr> <td>DOLOMITE - </td> <td></td> </tr> <tr> <td>SHALE - </td> <td></td> </tr> <tr> <td>SAND - </td> <td></td> </tr> </table>	ANYHYDRITE - 	LIMESTONE - 	DOLOMITE - 		SHALE - 		SAND - 	
CO - Circulate Out	LC - Lost Circulation																				
CON - Connection Made	NB - New Bit																				
DC - Depth Correction	NR - No Returns																				
DDC - Drills Depth Correc.	PG - Plugged Back																				
DS - Directional Survey	TD - Hot_Wireal Depth																				
DST - Drill Stem Test	WOB - Weight On Bit																				
ANYHYDRITE - 	LIMESTONE - 																				
DOLOMITE - 																					
SHALE - 																					
SAND - 																					
<table border="0"> <tr> <td>Total GAS - </td> </tr> <tr> <td>C1 GAS - </td> </tr> <tr> <td>C2 GAS - </td> </tr> <tr> <td>C3 GAS - </td> </tr> <tr> <td>C4 GAS - </td> </tr> <tr> <td>C5 GAS - </td> </tr> </table>		Total GAS - 	C1 GAS - 	C2 GAS - 	C3 GAS - 	C4 GAS - 	C5 GAS - 														
Total GAS - 																					
C1 GAS - 																					
C2 GAS - 																					
C3 GAS - 																					
C4 GAS - 																					
C5 GAS - 																					
<table border="1"> <thead> <tr> <th>DEPTH</th> <th>DRILL TIME (R.O.P.)</th> <th>COMMENTS</th> <th>LITHOLOGY</th> <th>POR FLR CUT</th> <th>GAS ANALYSIS (HOTWIRE)</th> <th>DESCRIPT & REMARKS</th> </tr> </thead> </table>		DEPTH	DRILL TIME (R.O.P.)	COMMENTS	LITHOLOGY	POR FLR CUT	GAS ANALYSIS (HOTWIRE)	DESCRIPT & REMARKS													
DEPTH	DRILL TIME (R.O.P.)	COMMENTS	LITHOLOGY	POR FLR CUT	GAS ANALYSIS (HOTWIRE)	DESCRIPT & REMARKS															

Includes information about the well such as Producer, Well name, Location, Depths, etc..

The lithology key includes only the lithology that is on this log.

[Back to "Tabs"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

Log

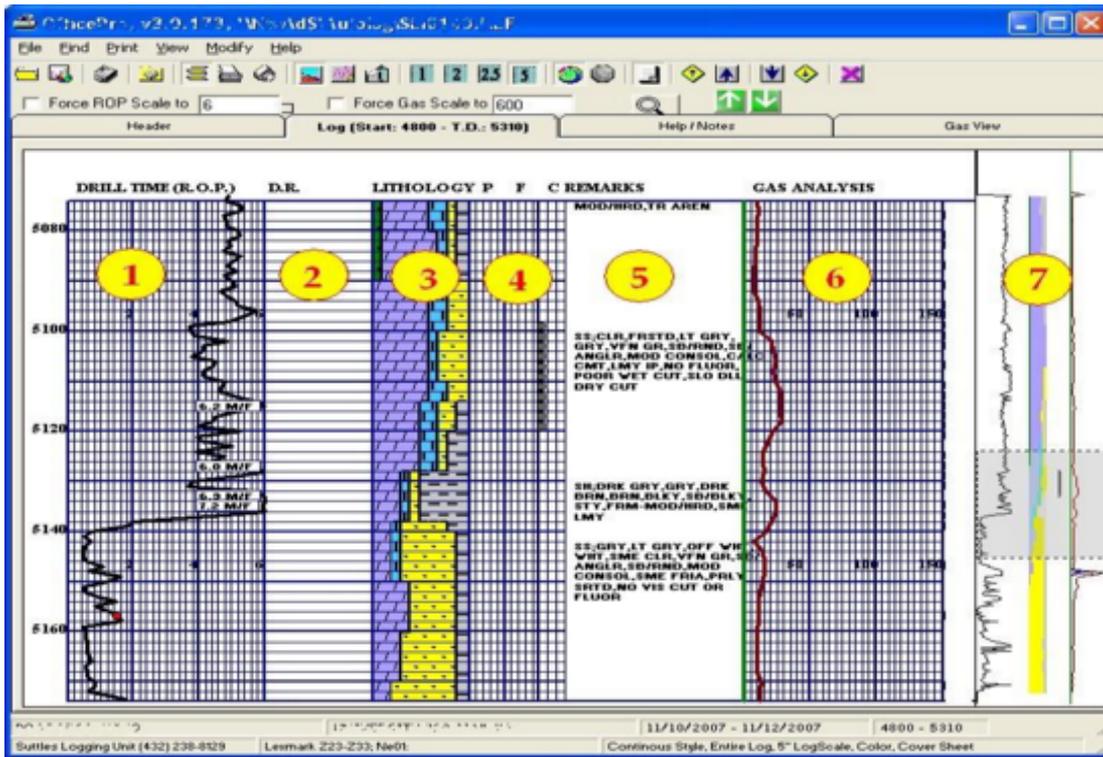

ROP

ROP in Min/Ft.

The Tool Tip Text for this column will display Ft/Hr

Depth Remarks

Includes: Mud, Bit, Flare and Pump information etc..

Lithology

Displays the Lithology for the given depth in 10% increments.

The Tool Tip Text fro this column will display the percentage and the name of the symbol under the mouse pointer.

Porosity, Fluorescence, Cut

Displays the Porosity, Fluorescence and Cut for the given depth.

- Porosity ~ 0-25 %
- Fluorescence ~ 0 - 100 %
- Cut ~ None..Trace.. Poor.. Fair.. Good

Description

Description of lithology and information about bits, trips, cores etc...

Gas

- Gas analysis for the given depth.
 - Black = Total Gas
 - Red=C1 Yellow=C2 Blue=C3 Purple=IC4+NC4 Green=IC5+NC5
- The Chromatograph is cycled every 3-9 minutes.
- An integrator built in to the logging program calculates the breakdown of hydrocarbons and enters them on the log.

Thumbnail View

- This view will always display the entire log. As log is added, it will be compressed to display it.
- The gray window represents the 100' of log being displayed.
- Click anywhere on this thumbnail to jump to that position in the log.
(Note: Hold the mouse button as you move up or down the thumbnail view to scroll through the log)


[Back to "Tabs"](#)

[Back to "OfficePro Details"](#)

[Back to "Contents"](#)

-0-

Gas View

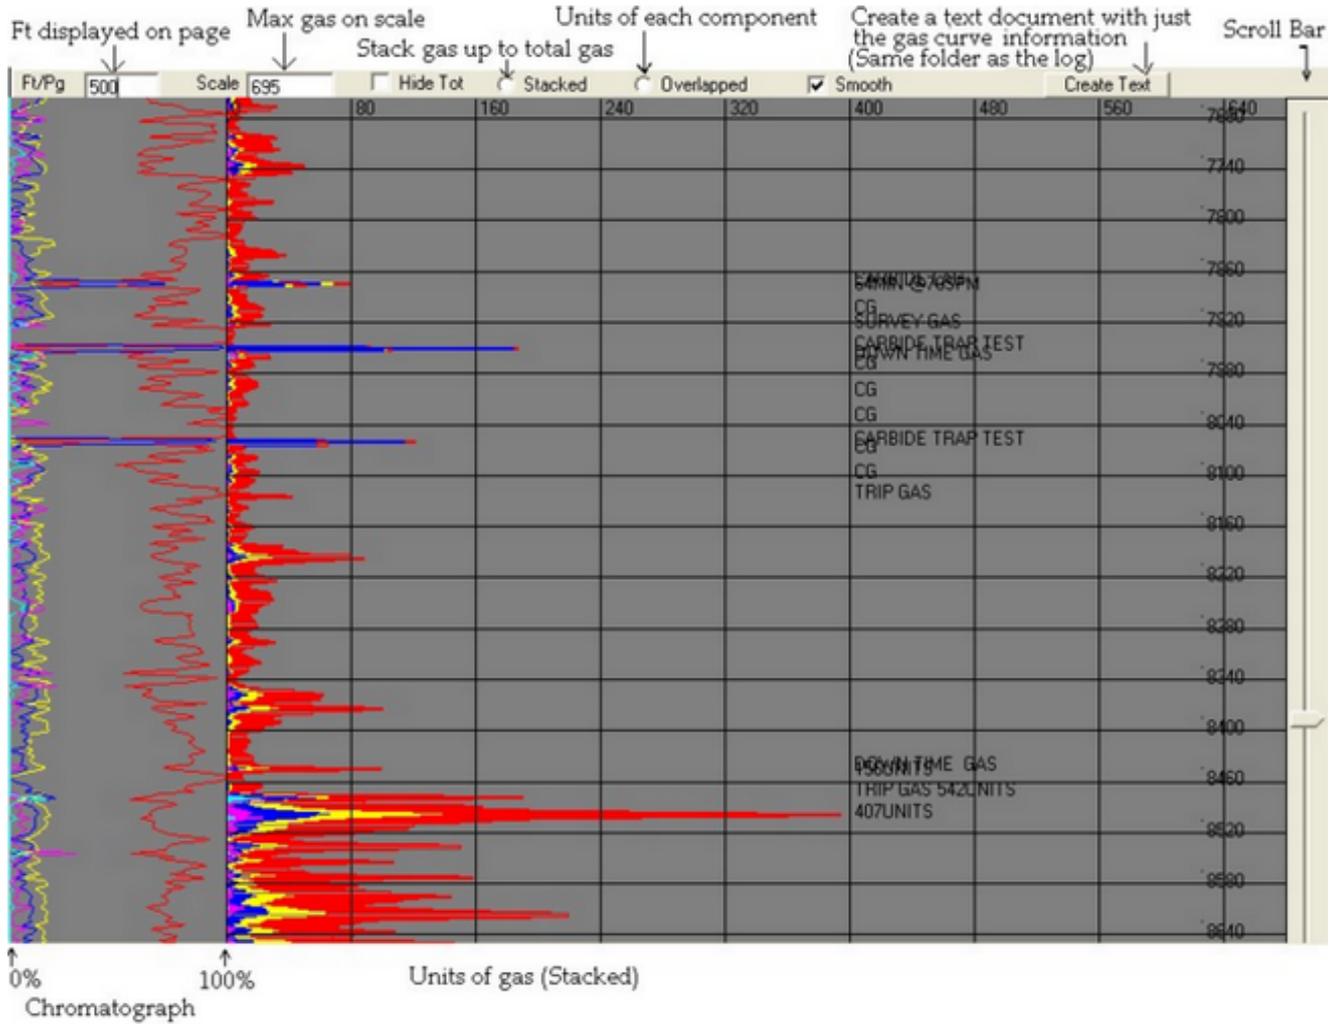

[Back to "Tabs"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

-0-

Trouble Shooting

[Lithology Doesn't Look Right](#)

[Log Doesn't Load When I Double
Click on It](#)

[The Log Prints Lithology and
Gas on Alternating Pages](#)

[The Printer Shows Way Too Many Pages](#)

[The Mud Log Will Not Print
Correctly on My Plotter](#)

[Back to "Tabs"](#)
[Back to "OfficePro Details"](#)
[Back to "Contents"](#)

-0-

Log Doesn't Load When I Double Click On It Error Starting OfficePro

- If OfficePro has never run on this computer.
 - Verify that at least one printer is installed in the printers folder
 - One printer or the Fax must be installed.
- This is the only log that gives an error.
 - The file might be corrupt
 - Download the log again.

Logs will not open or the wrong program opens them.

- Go to Control Panel.
- Click Add/Remove Software.
- Uninstall OfficePro.
- Re-install OfficePro. [Click Here for help Installing OfficePro](#)

[Back to "Trouble Shooting"](#)
[Back to "Contents"](#)

-0-

The Log Prints Lithology and Gas on Alternating Pages

This problem occurs when:

- **The paper size is wrong in Printer Settings in Control Panel**
 - Set the paper size to 8.5 x 11 inches
 - Orientation should be Portrait
 - If you are printing a banner log, be sure the paper is set to banner.
 - Restart OfficePro if any changes are made from Control Panel
- **XAtlas Font might not be registered with windows.**
 - see [Lithology Doesn't Look Right](#) to correct this problem.

[Back to "Trouble Shooting"](#)

[Back to "Contents"](#)

-0-

The Printer Shows Way Too Many Pages

This problem occurs when:

- **The paper size is wrong in Printer Settings in Control Panel**
 - Set the paper size to 8.5 x 11 inches
 - Orientation should be Portrait
 - If you are printing a banner log, be sure the paper is set to banner.
 - Restart OfficePro if any changes are made from Control Panel

- **XAtlas Font might not be registered with windows.**
 - see [Lithology Doesn't Look Right](#) to correct this problem.

[Back to "Trouble Shooting"](#)

[Back to "Contents"](#)

-0-

The Mud Log Will Not Print Correctly on My Plotter

Unfortunately, some plotters will not print correctly with OfficePro.

If you are using one of these plotters, use SutView.

SutView is a new viewer being developed at Suttles Logging.

With SutView :

- Import additional curves into the mud log.
- Generate custom LAS files with just the data you need.
- Generate CSV files. (Plain text data separated by commas.)
- Generate TIFF files.
- View Total Gas in a Logarithmic scale.
- Load two logs for correlation in the same window.
- Easily Print to any Plotter or Printer.
- SutView will remember printer settings that are assigned to it.

If you followed the instructions for installing OfficePro in this help file, you already have SutView installed.

[Click Here for instructions on Installing OfficePro](#)

Before printing the first time, setup the printer in Printing Preferences from the Printers and Faxes folder.

For banner logs on a standard printer use these settings:


- 8.5 x 11 paper (or any setting with a page length that does not contain a fraction)
- Set the Paper to Banner
- Set the Orientation to Portrait

For printing to a plotter, try these settings:


- Set the page length to a value longer than the log you are printing or to a length that does not have a fraction.
- If there is an option for page separation, turn it off.
- Set the width of the page to the desired width of the log.

To Print a Log


- Right click on a Suttles Mud log that is saved on your computer.

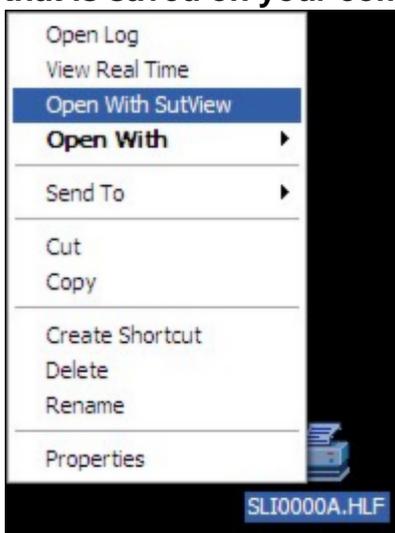

- Click Open With SutView
- When the log opens, Click File

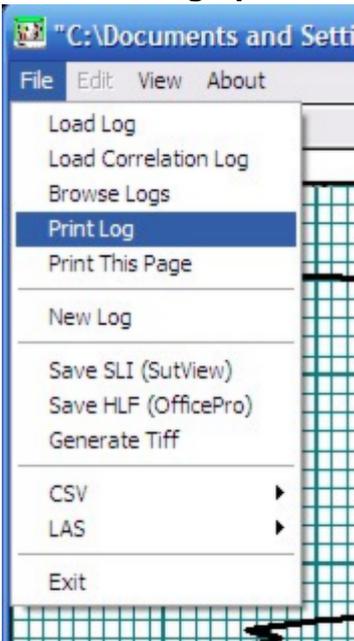

- Click Print Log
- If you have set up the plotter to print with Sutview and it should always use these settings, click Set As SutView Default Printer.

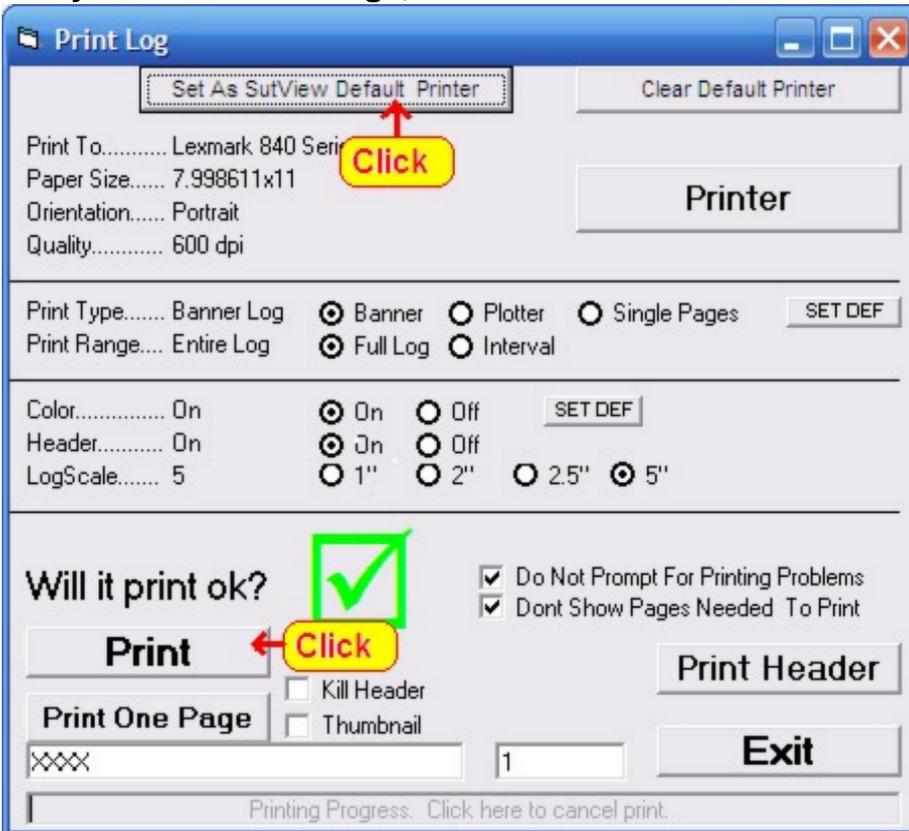

- Click Print
- Due to the varied settings on plotters, SutView will not be able to determine beforehand if a particular setting will work.

Will it print ok?



Thats it. If you have any problems, or need more help, feel free to call any time.

**Jay Scarpa (JScarpa@sutlog.com)
Harlan Martin (Harlan@sutlog.com)
Suttles Logging Inc.
Office: 432-687-3148**

-0-

Index

- C -

Change ROP or Gas Scales 6
Contents 4

- F -

File 17
Find 18

- G -

Gas View 29
Generate LAS Files 7

- H -

Header 26
How To 5

- I -

Install OfficePro 11

- L -

Lithology Doesn't Look Right 31
Log 27
Log Doesn't Load When I Double Click On It 32

- M -

Menu Options 16
Modify 22

- N -

Navigate Through the Log 8

- O -

OfficePro Details 15

- P -

Print 19
Print a Log 9

- T -

Tabs 25
The Log Prints Lithology and Gas on Alternating Pages 33
The Mud Log Will Not Print Correctly on My Plotter 35
The Printer Shows Way Too Many Pages 34
Tool Bar Icon Descriptions 24
Trouble Shooting 30

- V -

View 21